



# NTR Help Sheet


## Chain Saws

See Below for Printed Instructions

[Click Here for Video](#)



Off – Run – ½ Choke – Full Choke

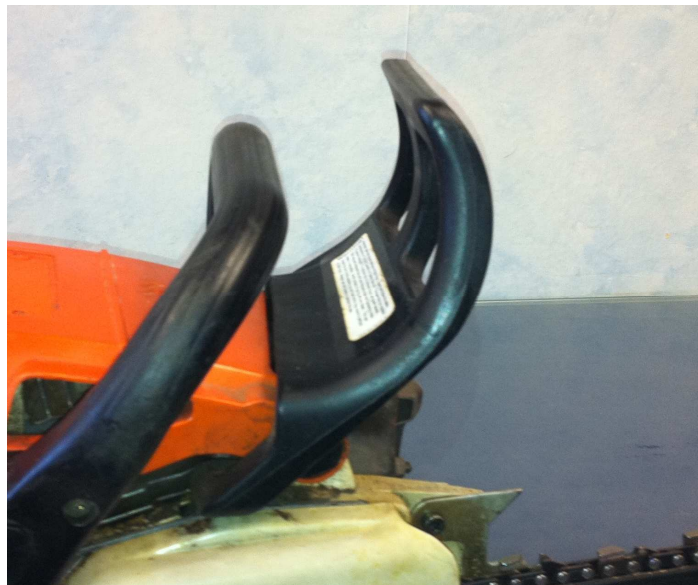

Emergency Brake  
Curved black bar to the right

### Trouble Starting

Note the picture on the left. You will see a vertical slider with 4 settings as follows:

- 0 OFF
- I RUN
- )( ½ CHOKE
- )- FULL CHOKE

Squeeze the throttle on the under side of the handle, and use the throttle lock on the top to lock the throttle on while you start the saw

To start the saw, move the slider to the bottom setting to full choke

Pull cord once

If the saw starts, move the slider up to the Run position

If the saw does not start on the first pull, move slider up one setting to ½ choke

Continue to pull the cord up to 3 times

If the saw starts, move the slider up to the Run position.

If saw has not started yet, move the slider up to Run

Continue to pull the cord.

If the saw still will not start , repeat the above sequence, but also check the “Won’t stay running / Stalls out” section below.

## **Won't Stay Running – Stalls Out – Boggs Down**

Note the picture above on the right. The curved black bar on the right is the emergency brake.

The emergency brake must be in the “off” position for the saw to run.

The off position is pulled to the left in the picture above.

Ensure that the brake is in the off position.

Note: The saw may run with the brake on, but it will bog down, tend to die out, will not cut well, and you may burn out the emergency safety brake.